



PARTS LIST

- 2. VOLUTE
- 3. IMPELLER
- 5. PACKING GLAND
- 6. SUCTION WEAR RING
- 8. FRAME
- 10. PACKING
- 11. VOLUTE GASKET
- 12. IMPELLER LOCK SCREW
- 13. IMPELLER WASHER
- 14. SHAFT
- 15. SHAFT SLEEVE
- 16. DEFLECTOR
- 18. CLOSURE SEAL (P.E.)
- 18A. OUTER SEAL (P.E.)
- 18B. INNER SEAL (P.E.)
- 19. CLOSURE SEAL (D.E.)
- 19A. OUTER SEAL (D.E.)
- 19B. INNER SEAL (D.E.)
- 20. BEARING
- 21. DRIVE END BEARING (2)
- 22. BEARING COVER (P.E.)
- 23. BEARING COVER (D.E.)
- 32. GLAND STUD & NUTS
- 35. INTERNAL SNAP RING
- 36. SHAFT KEY (D.E.)
- 38. BACKPLATE
- 94. CLEAN OUT COVER (NOT SHOWN)
- 129. LOCK NUT
- 129A. LOCK WASHER
- △ 174. GASKET (D.E.)
- △ 188. VIEW GAGE
- △ 197. GASKET (P.E.)
- 216. CLEAN OUT COVER GASKET (NOT SHOWN)
- 262. BREATHER
- 343. PUMP SUPPORT ASSEMBLY

OIL LUBRICATED SHOWN

△ USED ON OIL LUBE FRAMES ONLY



CORNELL PUMP COMPANY

10NHPP WITH PACKING
F12 (GREASE LUBE)/F12K (OIL LUBE)