



PARTS LIST

- 2. VOLUTE
- 3. IMPELLER
- 4. BRACKET
- 5. PACKING GLAND
- 6. SUCTION WEAR RING
- 8. FRAME
- 10. PACKING
- 11. VOLUTE GASKET
- 14. SHAFT
- 15. SHAFT SLEEVE
- 18. LIP SEALS(4 FOR OIL; 2 FOR GREASE)
- 20. PUMP END BEARING
- 21. DRIVE END BEARING
- 22. BEARING COVER
- 32. GLAND STUD & NUT
- 36. SHAFT KEY (D.E.)
- 38. BACK SIDE PLATE
- △ 44. BRACKET INSERT RING
- 45. MOUNTING FOOT
- 107. SHIMS
- 129. LOCK NUT
- 129A. LOCK WASHER
- 142. SUCTION INSERT
- △ 174. BEARING COVER GASKET
- △ 188. OIL LEVEL SIGHT GAUGE
- △ 197. PUMP BRACKET GASKET
- 238. SHAFT BEARING SPACER
- 238A. FRAME BEARING SPACER
- 262. BREATHER
- 331. GLAND CLIP
- 343. PUMP SUPPORT ASSEMBLY

OIL LUBRICATED SHOWN

△ USED ON OIL LUBE FRAMES ONLY
NOTE: LUBRICATION PIPING NOT SHOWN



CORNELL PUMP COMPANY
16261 SE 130TH. PORTLAND, OR 97015

8NHPP-F18K WITH PACKING
F18 (GREASE LUBE) / F18K (OIL LUBE) HORIZONTAL FRAME