


PARTS LIST

- 2. VOLUTE
- 3. IMPELLER
- 4. BRACKET
- 5A. RUN DRY GLAND
- 6. SUCTION WEAR RING
- 8. FRAME
- 11. VOLUTE GASKET
- 14. SHAFT
- 15. SHAFT SLEEVE
- 16. DEFLECTOR
- 18. LIP SEALS (4 FOR OIL; 2 FOR GREASE)
- 18B. LIP SEAL (RUN-DRY)
- 20. PUMP END BEARING
- 21. DRIVE END BEARING
- 22. BEARING COVER
- 29. VENT PLUG
- 36. SHAFT KEY (D.E.)
- 38. BACKPLATE
- 40. MECHANICAL SEAL
- △ 44. BRACKET INSERT RING
- 45. MOUNTING FOOT
- 99. SEAL SPACER
- 107. SHIM
- △ 174. BEARING COVER GASKET
- △ 188. OIL LEVEL SIGHT GAUGE
- △ 197. PUMP BRACKET GASKET
- 262. BREATHER
- 343. PUMP SUPPORT ASSEMBLY
- 447. V-RING

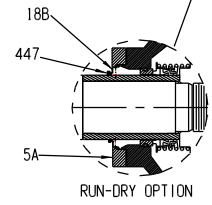

OIL LUBRICATED SHOWN

RUN-DRY OPTION

△ USED ON OIL LUBE FRAMES ONLY



CORNELL PUMP COMPANY

MODEL: 6NHP & 6NHPP W/CYCLOSEAL  
F16 (GREASE LUBE) / F16K (OIL LUBE) HORIZONTAL FRAME