



PARTS LIST

- 1. SUCTION COVER
- 2. VOLUTE
- 3. IMPELLER
- 4. BRACKET
- 5. PACKING GLAND
- 6. SUCTION WEAR RING
- 8. FRAME
- 10. PACKING
- 11. VOLUTE GASKET
- 14. SHAFT
- 15. SHAFT SLEEVE
- 18. LIP SEAL (P.E.)
- 20. PUMP END BEARING
- 21. DRIVE END BEARING (2)
- 22. BEARING COVER (P.E.)
- \*29. VENT PLUG
- 32. GLAND STUD & NUT
- 36. DRIVE END SHAFT KEY
- 44. BRACKET INSERT RING
- 46. LANTERN RING (OPTIONAL)
- 59. O-RING
- 97. GREASE CUP (OPTIONAL)
- 107. SHIMS
- 174. BEARING COVER GASKET (D.E.)
- 188. OIL LEVEL SIGHT GAUGE
- 262. BREATHER
- 331. GLAND CLIPS (2)

\*NOT ALWAYS USED