



PARTS LIST

- 2. VOLUTE
- 3. IMPELLER
- 4. PUMP BRACKET
- 5. PACKING GLAND
- 6. SUCTION WEAR RING
- 8. FRAME
- 10. PACKING
- 11. VOLUTE GASKET
- 14. SHAFT
- 15. SHAFT SLEEVE
- 16. DEFLECTOR
- 18. LIP SEALS (4 for oil; 2 for grease)
- 20. PUMP END BEARING
- 21. DRIVE END BEARING
- 22. BEARING COVER
- \*29. VENT PLUG
- 32. GLAND STUD & NUT
- 36. SHAFT KEY (D.E.)
- 38. BACK SIDE PLATE
- △ 44. BRACKET INSERT RING
- 45. MOUNTING FOOT
- 46. LANTERN RING (OPTIONAL)
- 97. GREASE CUP (OPTIONAL)
- 107. SHIMS
- △ 174. BEARING COVER GASKET
- △ 188. OIL LEVEL SIGHT GAUGE
- △ 197. PUMP BRACKET GASKET
- 262. BREATHER
- 331. GLAND CLIPS (2)
- 343. PUMP SUPPORT ASSEMBLY (4NMPP ONLY)

NOTE: OIL LUBE CONFIGURATION SHOWN

△ USED ON OIL LUBE FRAMES ONLY

\*NOT ALWAYS USED



**CORNELL PUMP COMPANY**

MODELS 4NMPP & 4NMP WITH PACKING  
F16 (grease lube)/F16K (oil lube) horizontal frame