



PARTS LIST

- 2. VOLUTE
- 3. IMPELLER
- 4. BRACKET
- 5A. RUN DRY GLAND
- 6. WEAR RING
- 8. FRAME
- 11. VOLUTE GASKET
- 14. SHAFT
- 15. SHAFT SLEEVE
- 16. DEFLECTOR
- 18. LIP SEALS (4 FOR OIL; 2 FOR GREASE)
- 18B. LIP SEAL (RUN-DRY)
- 20. BEARING (P.E.)
- 21. BEARING (D.E.)
- 22. BEARING COVER
- 29. VENT PLUG
- 36. SHAFT KEY (D.E.)
- 38. BACKPLATE
- 40. MECHANICAL SEAL
- △ 44. BRACKET INSERT RING
- 59. BRACKET O-RING
- 99. SEAL SPACER
- 107. SHIMS
- △ 174. BEARING COVER GASKET
- △ 188. OIL LEVEL SIGHT GAUGE
- 262. BREATHER
- 343. PUMP SUPPORT ASSEMBLY (4NMPP ONLY)
- 447. V-RING

OIL LUBRICATED SHOWN

△ USED ON OIL LUBE FRAMES ONLY



CORNELL PUMP COMPANY

MODELS: 4NMP & 4NMPP W/CYCLOSEAL
F5 (GREASE LUBE) / F5K (OIL LUBE) HORIZONTAL FRAME